## All technical data refer to the measure mm

### **HELICOIL®** manual installation tool

The H-PMG manual installation tool allows an easy installation of HELICOIL® Classic and HELICOIL® Plus thread inserts. The tool features a leader cartridge, a pitch-controlled threaded mandrel and a depth stop and fits metric coarse threads.

### Note:

Only required for  $\mathsf{HELICOIL}^{\$}$  Plus for fine screw threads and special applications. As an alternative, a  $\mathsf{HELICOIL}^{\$}$  Plus installation mandrel can be used.

### **Properties:**

- Smooth mandrel
- Pitch-controlled
- With depth stop
- With leader cartridge
- For HELICOIL® Classic, HELICOIL® Plus Free Running and HELICOIL® Plus Screwlock


Technical information can be found on the last page.


Diameter	Article number
(d)	
M2.5	01500225000
M3	01500203000
M4	01500204000
M5	01500205000



# All technical data refer to the measure mm

### **HELICOIL® Plus** thread inserts

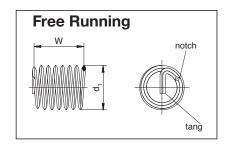

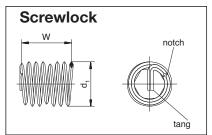


W and  $d_1$  are the control values for thread inserts (Free Running and Screwlock) before they have been installed. The length can only be measured for installed thread inserts.


### **Holding thread**

### 

### DHC D HC COO

### **Assembly**

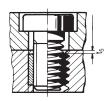

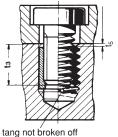

Prior to tapping, counter-bore 90° and deburr. Outside diameter of **countersink** =  $D_{HC}$  + **0.1** mm.

- d = Nominal thread diameter
- P = Thread pitch
- d<sub>1</sub> = Outside diameter of thread insert prior to installation
- W = Number of threads prior to installation
- $D_{HC}$  = Outside diameter of the parent thread
- D<sub>1HC</sub>= Crest diameter
- Suitable twist drill diameter. Please note:
  D<sub>1HC</sub> is critical for selecting the correct twist drill diameter.
- t<sub>1</sub> = Minimum depth of tapped hole according to DIN 76 – Part 1 (guide value)
- t<sub>2</sub> = The nominal length of the thread insert corresponds to the minimum length of the full parent thread for blind holes or the minimum plate thickness for a through hole.
- t<sub>3</sub> = Maximum screw-in depth when the tang is not removed
- $t_5$  = Distance of the thread insert from the joint face = 0.25 to 0.5 P, if  $t_2$  corresponds to the abovementioned minimum value

When you use HELICOIL® Plus thread inserts for volume production, we recommend to add at least 1 x P to values  $t_1$  and  $t_2$ .